




New! NMT's Adult Fish Counter

Northwest Marine Technology (NMT) is pleased to introduce our Adult Fish Counter. The Adult Fish Counter is designed to be installed in fishways and ladders to provide real time counts of fish migrating upstream or entering a hatchery.

The Adult Fish Counter includes a control box (top center) and a sensor unit (bottom right) that is installed underwater within the fish channel. The system accounts for fish passing upstream or downstream through the sensor.

This first model of the Adult Fish Counter was developed for salmonids, and tallies adults and jacks separately, based on height. It graphs and displays the number of fish passing on an hourly, daily, and 30-day basis (example screens, above right) and tracks temperature. It can be programmed to send a "Target Reached" signal to an existing alarm system or another available indicator to let the operator know when a target number of fish have passed the sensors.

Please contact us for more information.

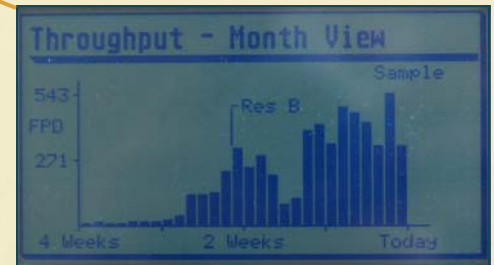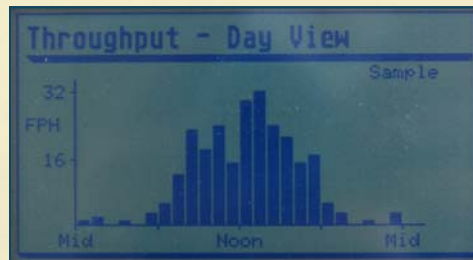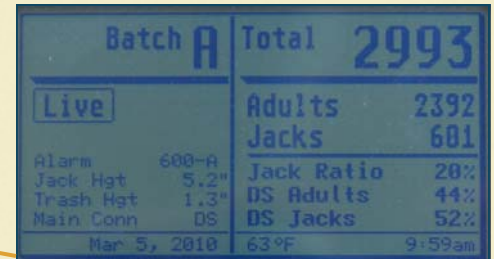

NMT's new Adult Fish Counter is available at an introductory price of \$14,900 USD.

Northwest Marine Technology, Inc.

www.nmt.us

Shaw Island, Washington, USA

Corporate Office
360.468.3375 office@nmt.us

Biological Services
360.596.9400 biology@nmt.us

